

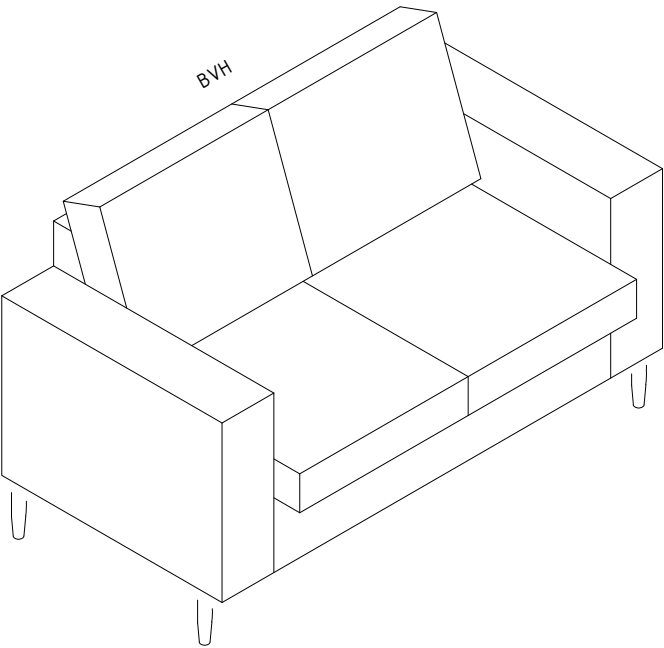


Assembly instruction BVH
Model 2015



Legs	
	
0 J1 X	0 H9 B
4	

Module
BVH

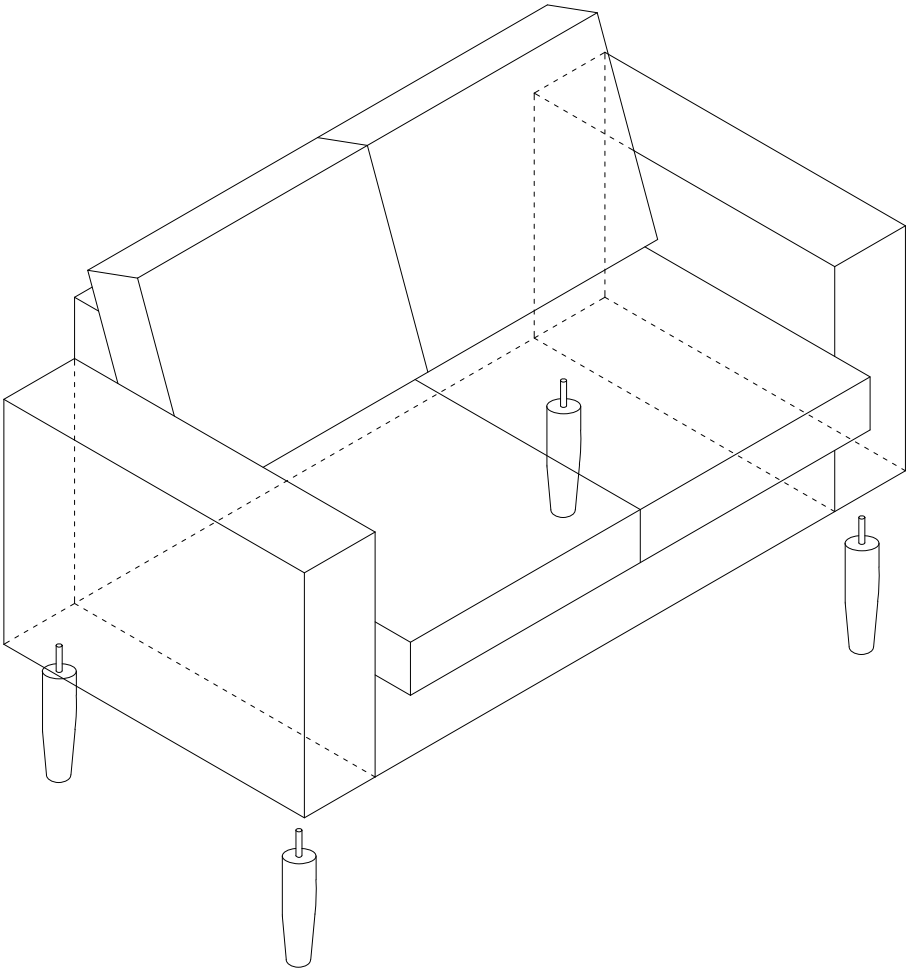



STEP 1: INSTALL ARMREST AND INSERT THE SCREWS





A x 2
POD M8
05-001054

B x 4
M8x30
05-001483

C x 1
L5
05-001045

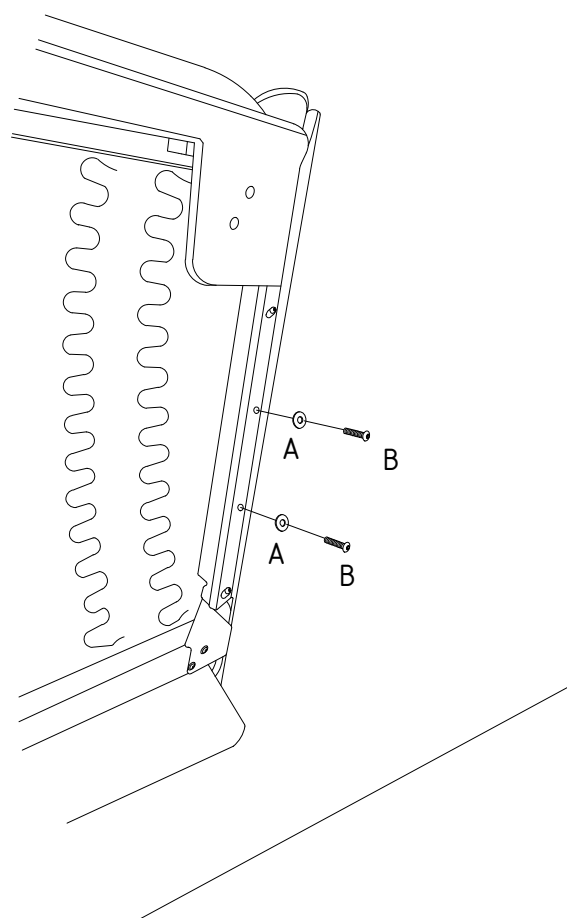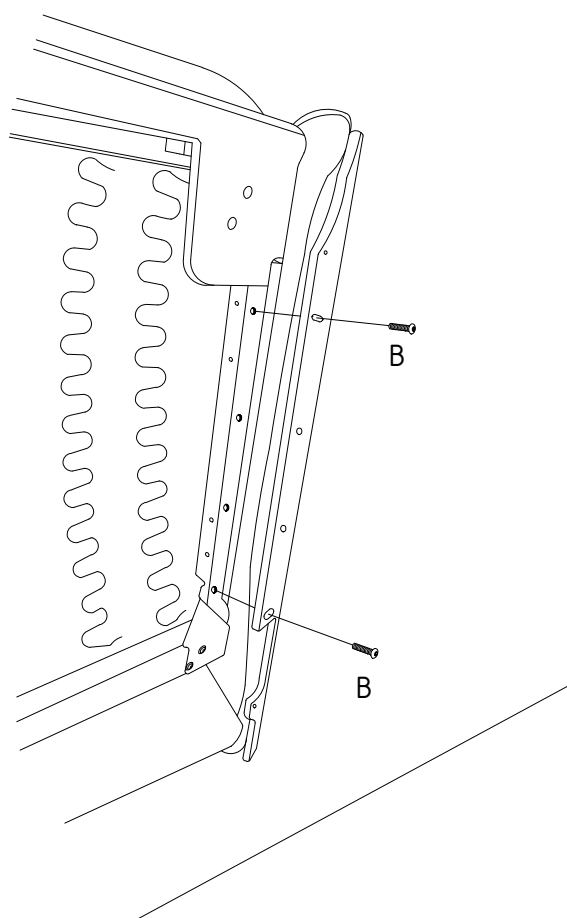

INFORMATION ABOUT SCREW ASSEMBLY

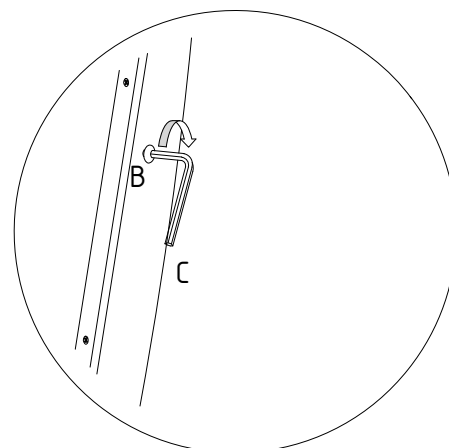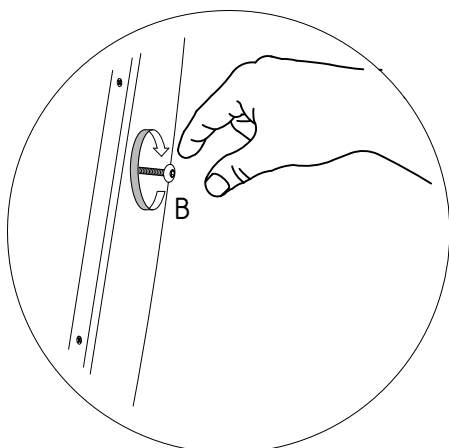

STEP 2: INSTALL ADDITIONAL SCREWS



D x 2
WDHS 5,0x40
05-000748

